Printed on: 2024-May-19





# Esquire 2-5/8 in (67 mm) LGTH Cabinet Knob - Polished Nickel/Gunmetal

Part Number: A36556PNGM

Esquire T-Knob, 2-5/8 in (67 mm), Polished Nickel / Gunmetal

Groundbreaking inspiration drives the Esquire Collection, a modern mixed media design featuring a cross-hatch textured center accented by smooth metal ends.

<div><br></div>

# **Product Description**

The Amerock A36556PNGM 2-5/8in(67mm) LGTH T-Knob is finished in Polished Nickel/Gunmetal. Innovative, groundbreaking ideas are the inspiration that drives Esquire. This striking mixed media collection pairs upscale finishes with textured accents that puts any room on the cutting edge of design. Elegant and eye-catching, Gunmetal is the perfect alternative for those who love metallic, but prefer a hint of subtlety. Use this finish to enhance the modern ambience of stainless steel and Black appliances without overwhelming their natural gravity, while Polished Nickel offers the beauty and luster of sterling silver without the cost or care it takes to maintain. Amerock markets decorative hardware solutions that inspire, coordinate and help express personal style. For the kitchen, bathroom and the rest of the home, with a variety of finishes and designs for all decorating tastes, Amerock is the ultimate, time-tested source for hardware needs. Amerock markets products in four categories: decorative hardware, decorative hooks, bath accessories and functional hardware.

# **Product Advantages**

- Gorgeous, high-end finishes available
- · Intricately crafted with precise detail for lifelong beauty and durability
- · Amerock Guardian Lifetime Guarantee against defect in material and workmanship

# **Included Products**

Industry standard mounting hardware


#### **Technical Documents**



# INSTALLING NEW CABINET HARDWARE


### Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is your to make!

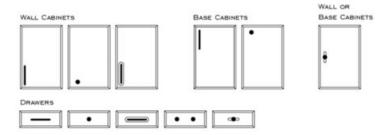

#### Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, then a 1/4" hole is required with studs sitting securely in the wood.



## **IMPORTANT** Screw Information

Amerock\* includes 8-32 x 1\* long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4\* thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4\*, then you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) used should be 1/4\* longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4\* thick front attached to a 3/4\* thick drawer box. In this situation, the total drawer thickness is 1-1/2\*, making a 1-3/4\* long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock may include metric screws instead of UNC screws.

View this product online at https://marathonhardware.com/pd/A36556PNGM

Pag	e	3	/	3