



Esquire 2-5/8 in (67 mm) LGTH Cabinet Knob - Polished Nickel/Black Bronze

Part Number: A36556PNBBR

Esquire T-Knob, 2-5/8 in (67 mm), Polished Nickel / Black Bronze

Groundbreaking inspiration drives the Esquire Collection, a modern mixed media design featuring a cross-hatch textured center accented by smooth metal ends.

<div>
</div>

Collection - - - - -	Esquire
Colour Group - - - - -	Silver
Finish Code - - - - -	Polished Nickel, Black Bronze
Material - - - - -	Zinc + Stainless Steel
Mounting Type - - - - -	8-32 Machine Screw
Overall Length - - - - -	67 mm
Projection (Height) - - - - -	38 mm
Style Family - - - - -	Designer
Type - - - - -	Knob
Width - - - - -	16 mm

Product Description

The Amerock A36556PNBBR Esquire 2-5/8 in. (67mm) Length Cabinet Knob is finished in Polished Nickel/Black Bronze. Groundbreaking inspiration drives the Esquire Collection, a modern mixed media design featuring a cross-hatch textured center accented by smooth metal ends. Black Bronze is a flat black finish with a warm undertone. Since 1929, Amerock has provided decorative hardware solutions that inspire and help express your personal style. Look for coordinated finishes from Amerock in cabinet hardware knobs and pulls, decorative hooks, bath accessories and functional hardware.

Product Advantages

- Gorgeous, high-end finishes available
- Intricately crafted with precise detail for lifelong beauty and durability
- Amerock Guardian Lifetime Guarantee against defect in material and workmanship

Included Products

Industry standard mounting hardware




Technical Documents



INSTALLING NEW CABINET HARDWARE


Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is your to make!

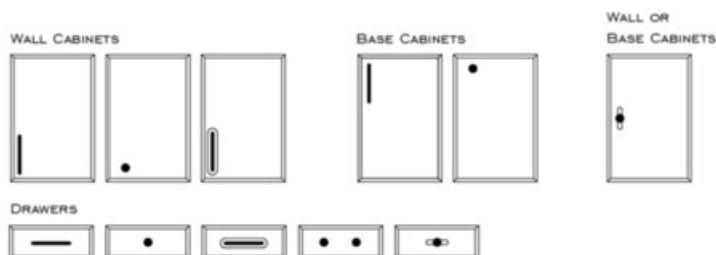

Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, then a 1/4" hole is required with studs sitting securely in the wood.

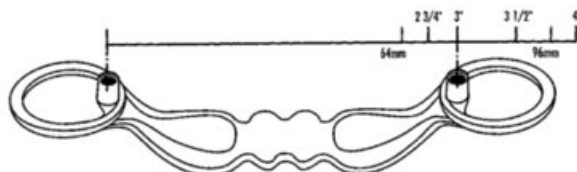

IMPORTANT Screw Information

Amerock® includes 8-32 x 1" long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4" thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4", then you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) used should be 1/4" longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4" thick front attached to a 3/4" thick drawer box. In this situation, the total drawer thickness is 1-1/2", making a 1-3/4" long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock may include metric screws instead of UNC screws.

View this product online at <https://marathonhardware.com/pd/A36556PNBBR>

