
Closet Rod Holder Installation

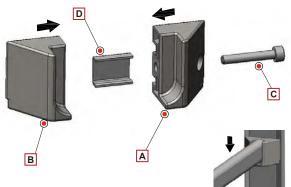

Important Information*

ð

Left and Right version included with purchase, left and right installation are similar.

- A x 1 Back right clamp support
- **B** x 1 Front left clamp support
- **C** x 2 Hexagon Socket head Screw M4 x 25mm
- **D** x 2 Anti-scratch plastic plates
- Insert anti-scratch plate D on its seat.
 Fasten the supports A with B with screws C on the vertical style after setting them just over the pipe hangers
- 3. Make sure the two supports **A** and **B** are completely closed against each other without opening. 4. mount the pipe hangers on the supports **A** and **B** and fix
- them with screws C



Eureka SLIM Closet Rod Holder	
Item Description	Part#
Anodized Aluminum	035-3529-AN
Matte Black	035-3529-МВ