## CABINET LIGHTING JUST GOT EASY

## WITH TRUE POSITION TOOLS' PUCK LIGHT JIG



Clamp jig in desired location.



Drill light hole to desired depth using adjustable stop.




Leave clamps in place drill wire hole until bit reaches light hole.



Pull wire through.



Press in light!

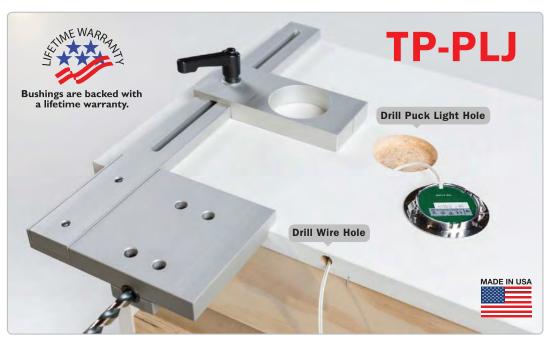

The LED Puck Light Installation Jig Kit is everything you need to start making a profit with LED lighting. Save time and money by installing a wire and puck lights in  $\frac{5}{8}$ " or  $\frac{3}{4}$ " panels without using false bottoms and create a cleaner, custom look.

Could also be used for strip lights, switches and concealing wires.

- Revolutionary design eliminates false bottoms / cabinet build-ups
- Included drill bits cover 95% of LED puck light sizes
- ·Conceals wires and lights in panels as thin as 5/8"
- ·Can be used with puck lights and strip lights
- $\cdot$  Forstner bits of 2  $^{1}\!\!/\!\!4"$  and 2  $^{1}\!\!/\!\!8"$  w/ depth stops are included
- Long wire drill bit  $\frac{3}{8}$ " x 12" length with stop collar is included
  - Aluminum jig body with split-bushings
  - $\boldsymbol{\cdot}$  Comes in durable hard plastic carrying case



