


Round Lazy-Susan Rotating Tray



Installation Instructions

This Installation Instruction document is applicable for:

BPS-0232 / BP0-0228 / 24 / 20 / 18 Round Polymer Lazy Susan

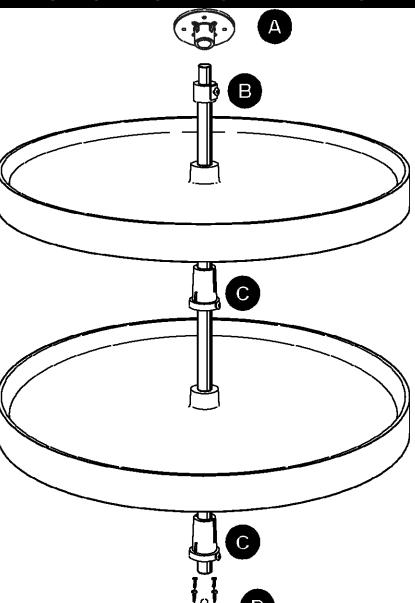

Content List:

- 1 telescopic chrome post with pre-installed adjustment ring B
- 2 positioning supports: A(top) and **D** (bottom)
- 2 Round shelves
- 2 supporting cones C
- Mounting hardware

Tools required for mounting:

Screwdriver: Philips or square drive

Mounting Steps - Instructions:

- 1. Locate cabinet center for placement of lower positioning support **D**. Insure that you have adequate clearance for free rotation of tray after installation.
 - Upper positioning support A must be placed directly above the lower. To achieve this, you should check vertical alignment with level or plumb line.
- Remove plastic cones C from the chrome post and insert into center hole of each shelf from the bottom.
 - *Note:* make sure that you line up the wide rib with the wide slot. To ensure a proper fit, you must push the cone into the center hole until it snaps into the locked position.
- 3. Slide both shelves back onto the chrome post, and then insert the bottom of post into lower positioning support **D**.
- 4. Insert telescoping portion of chrome post into the top positioning support **A**, and tighten set screw **B** to secure the assembly.
- 5. Adjust shelf height to desired level and fix into position by tightening the two set screws for each shelf.
- 6. For BPS-0232, further tighten set screws to firmly secure the extra weight of the shelves.