Accessories

Push Synchronizer bar

The synchronization system for Push-to-Open **Progressa⁺** slides has been developed to ensure that wider drawers can be opened with minimum effort, regardless of where pressure is applied.
The system links the two runners, which then become a single element; applying pressure on any part of the drawer front (even at the extremities), is sufficient for the Push devices to release and consequently for the drawer to open.

The synchronization can be used with any drawer width; its functionality is at its best with drawers wider than 762 mm (30").

PRODUCT FEATURES:
- frameless or blocked out face frame applications
- smooth and progressive running action
- slide load capacity remains unchanged
- available on any **Progressa⁺** drawer length
- minimum opening (X) = 280 mm
- maximum opening (X) = 1305 mm
- bar length = 1150 cut to size

## Technical information - Formula for cutting the bar to length

The assembly of the synchronizer requires a minimum 76 mm notch in the rear of the drawer

76 mm MIN   76 mm MIN   13 mm MAX

BAR LENGTH
G7E6P 16 mm drawer material = (X - 155) ±1

X (Max. 1305 mm)
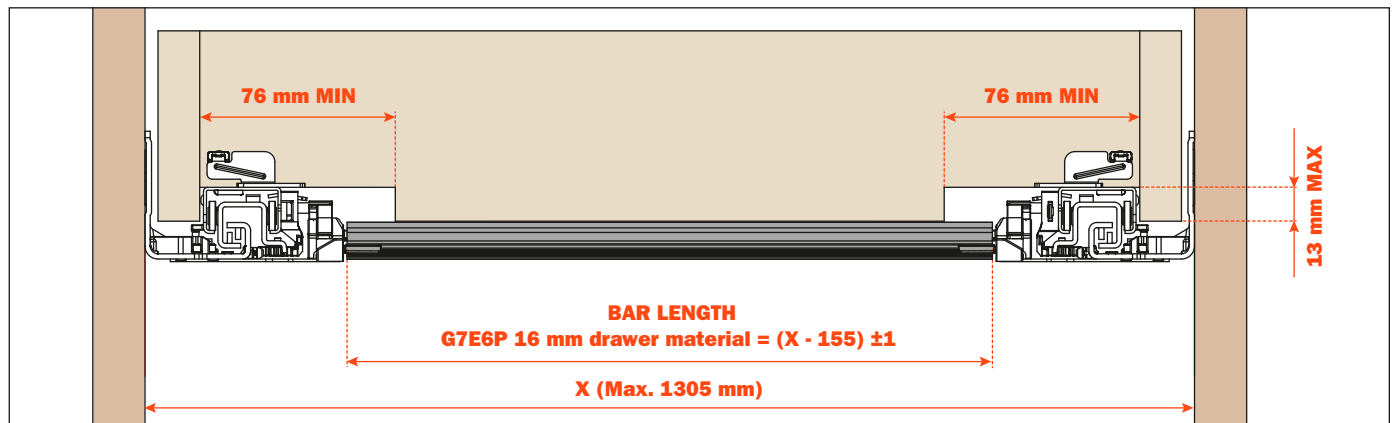
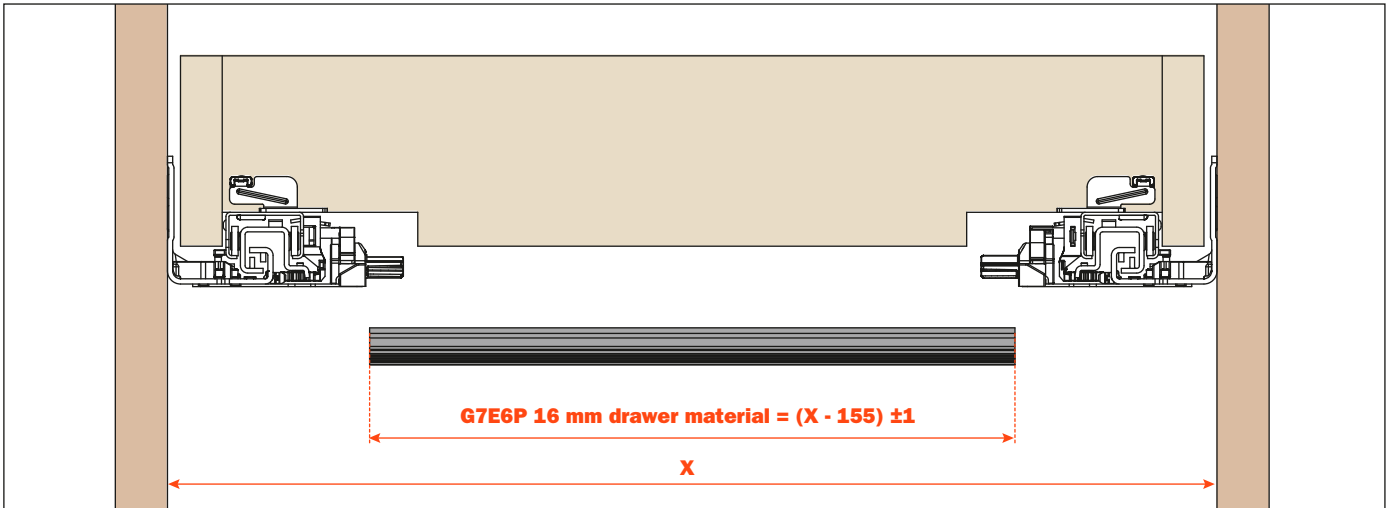**X = Internal width of the cabinet**

Assembly instructions

Insert and slide the carrier plates into position on the runners in the direction indicated by the arrows
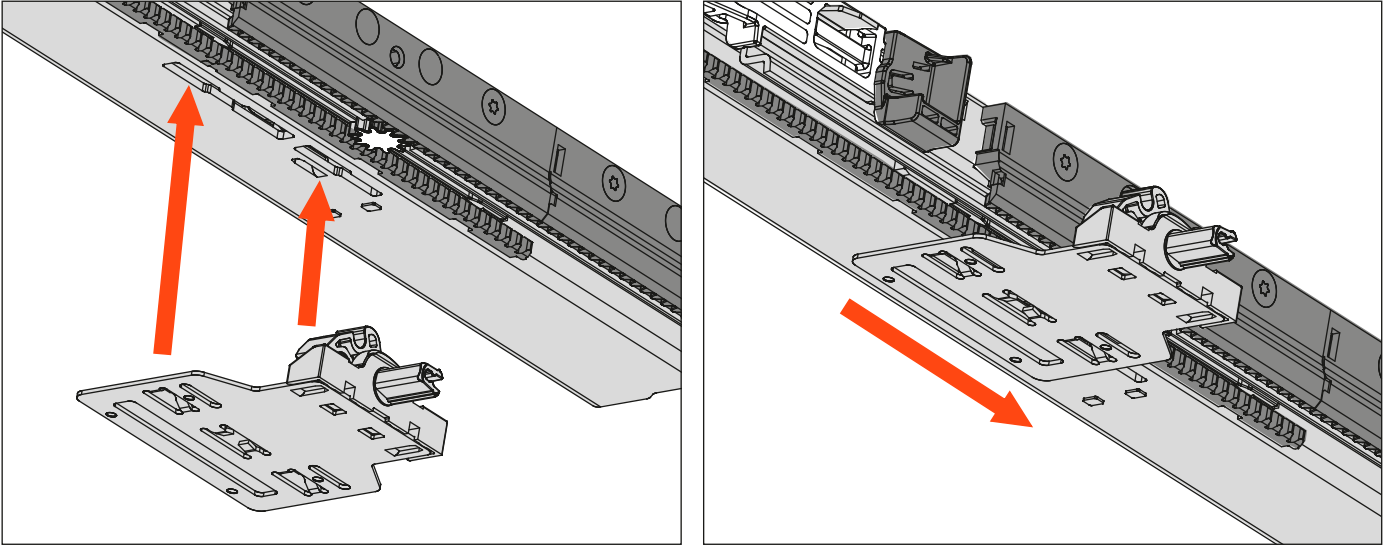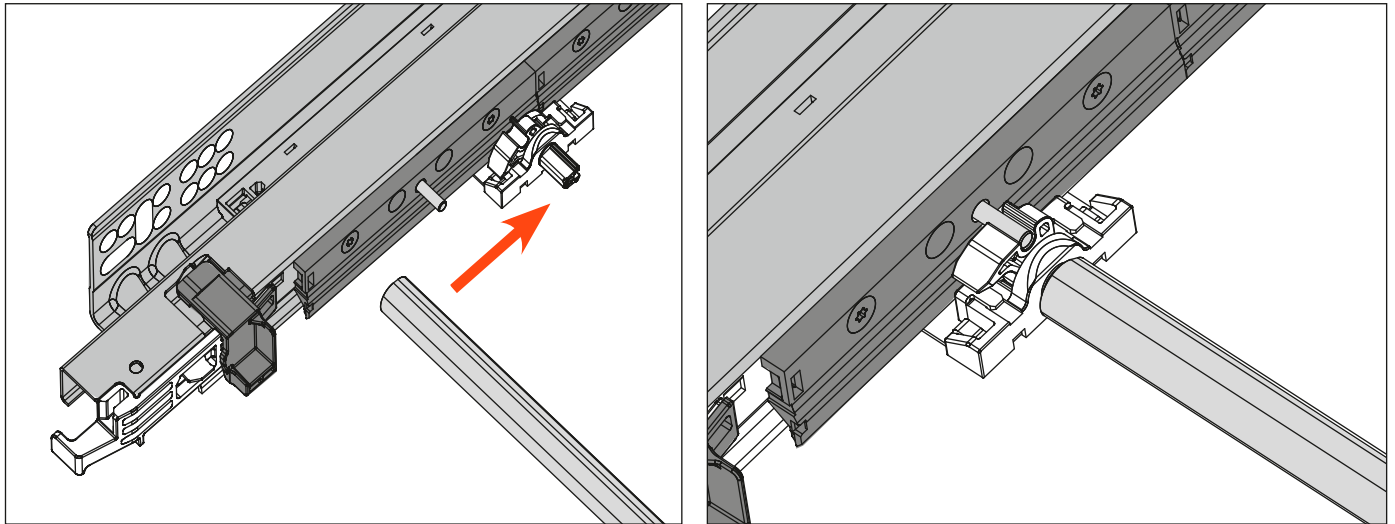
Fitting the driver pins to the runners
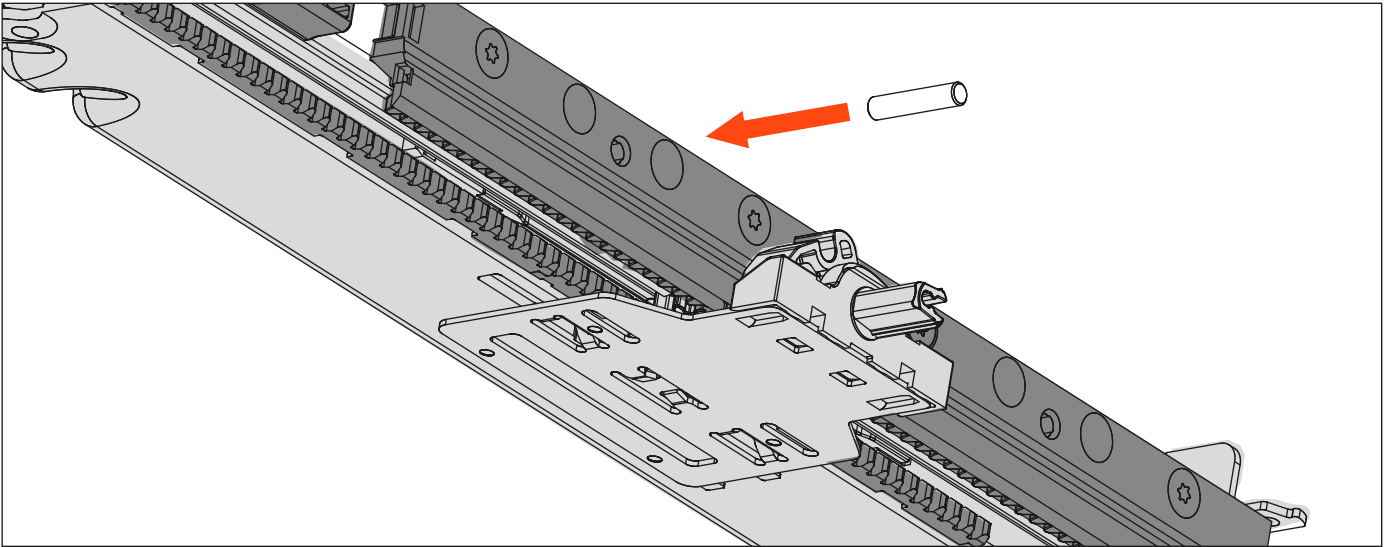
Cut the synchronizer bar to length

G7E6P 16 mm drawer material = (X - 155) ±1
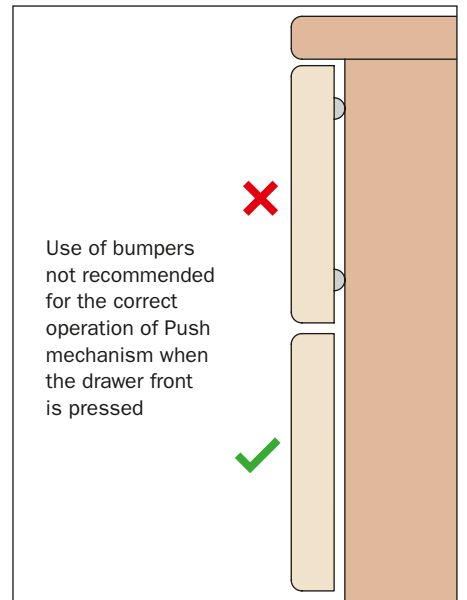
X

F70 Push synchronizer - Assembly instructions

Fix the bar to the plates and insert the drawer

Applying pressure on any part of the drawer front is sufficient for the drawer to open

Use of bumpers not recommended for the correct operation of Push mechanism when the drawer front is pressed

Packaging

SINGLE KIT PACKAGING

APKF7X51150

PACKAGING
1 box = 20 single kits

1 KIT CONTAINS:
- 1 stabilizer bar
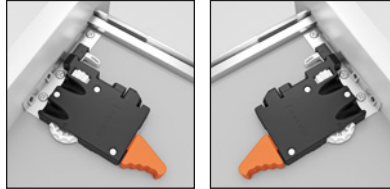- 2 driver pins
- 1 right carrier plate and 1 left carrier plate

Drilling templates for drawers - For all Progressa, Progressa⁺ and Progressa⁺ Shelf slides

Pre-drilling for the clips reduces the possibility of splitting the wood, thus assuring the correct and level installation of the clips.

The correct and level mounting assures a smooth assembly and operation of the drawer slide.
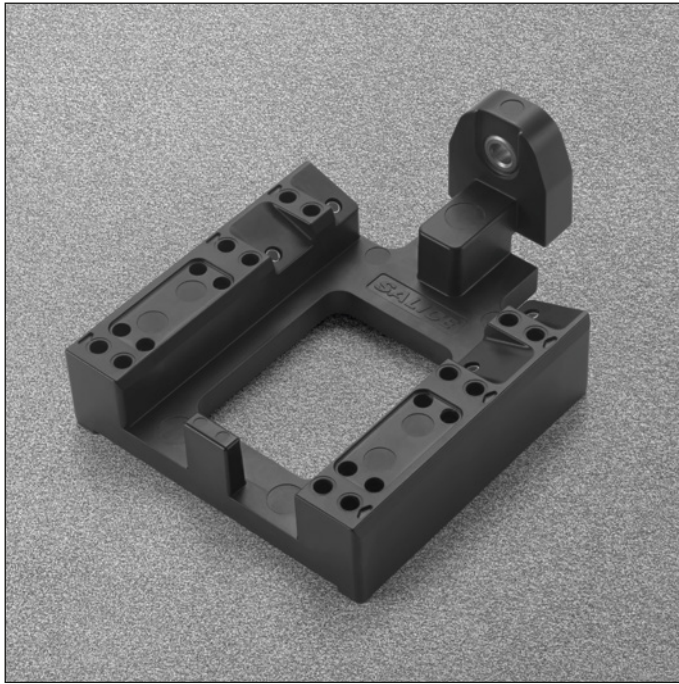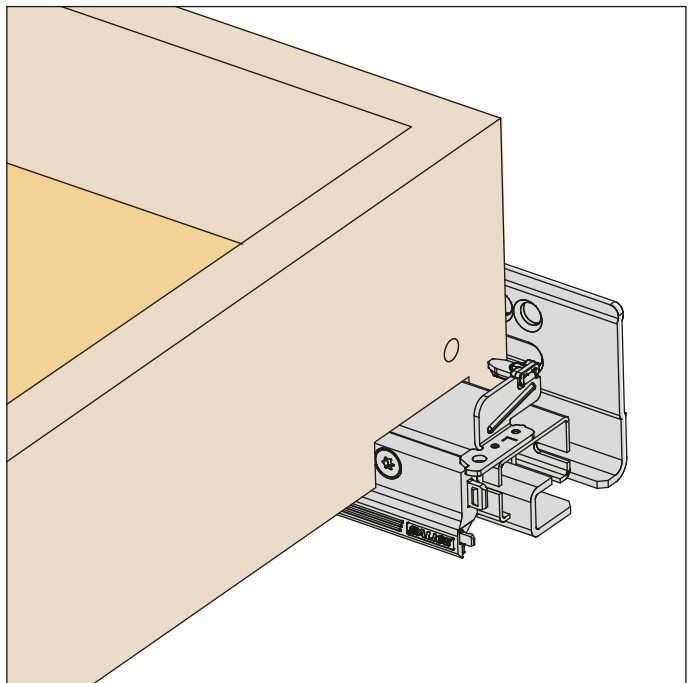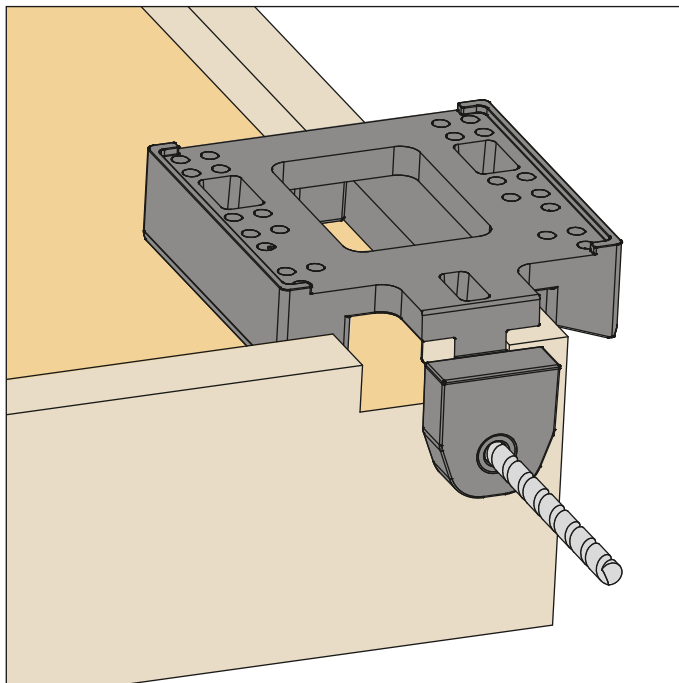

Front locking device
AFCGXX3B
Right and left

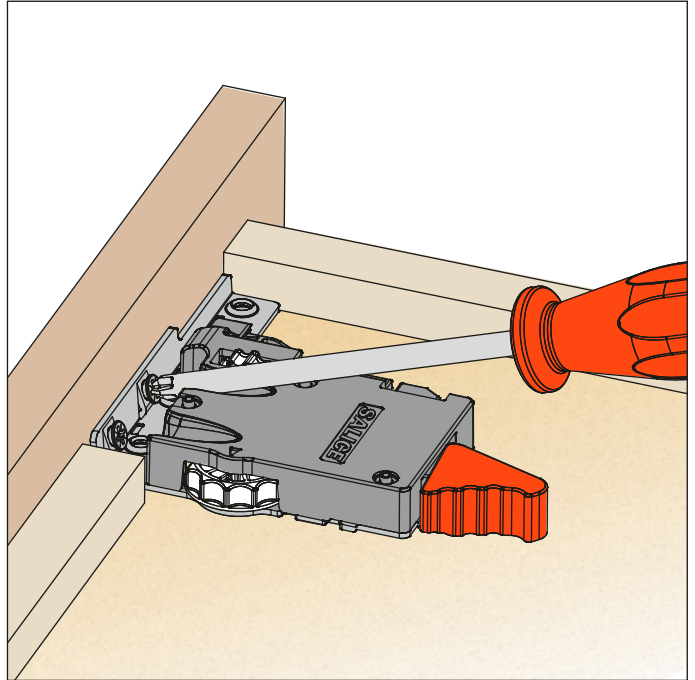**Drilling template**
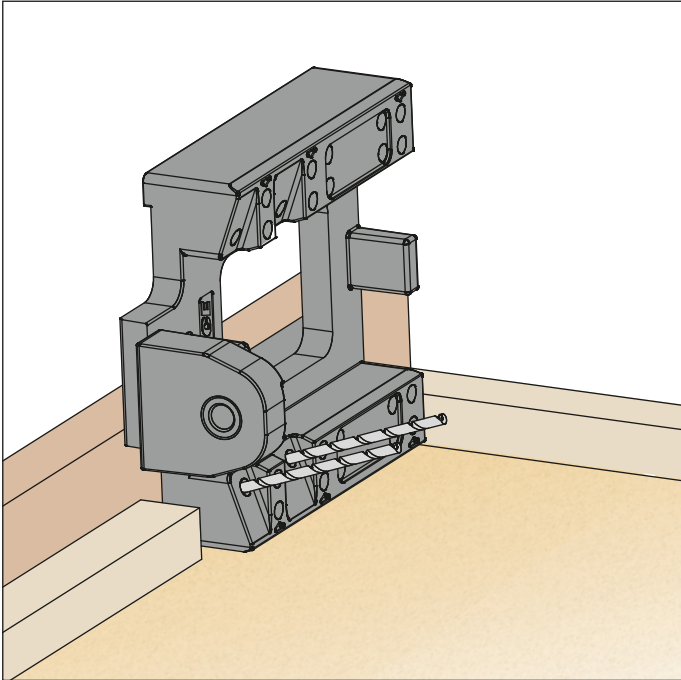## ASGD704U3XA

PACKAGING
1 box = 1 pc.

Back drilling for hook

Pre-bore for rear hook for proper alignment and depth (min. depth = 10 mm)

Use a ø 6 mm drill bit
Technical information, see page 10.

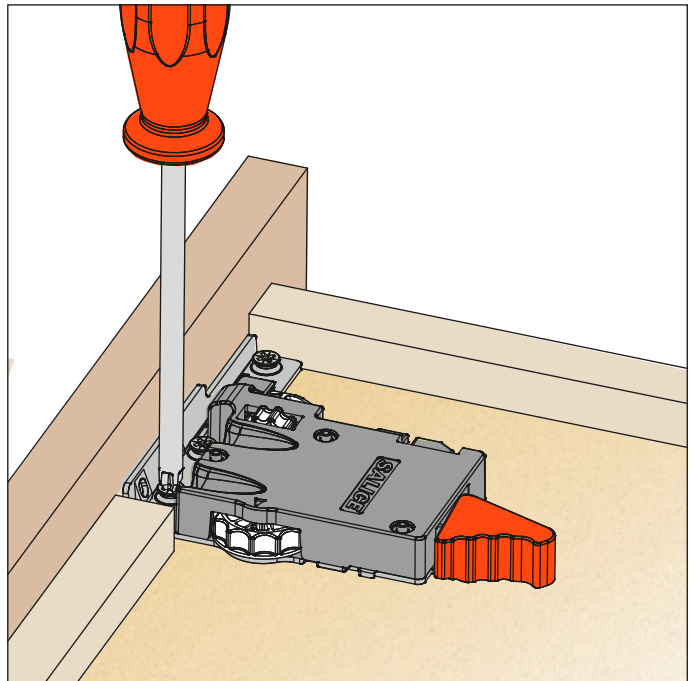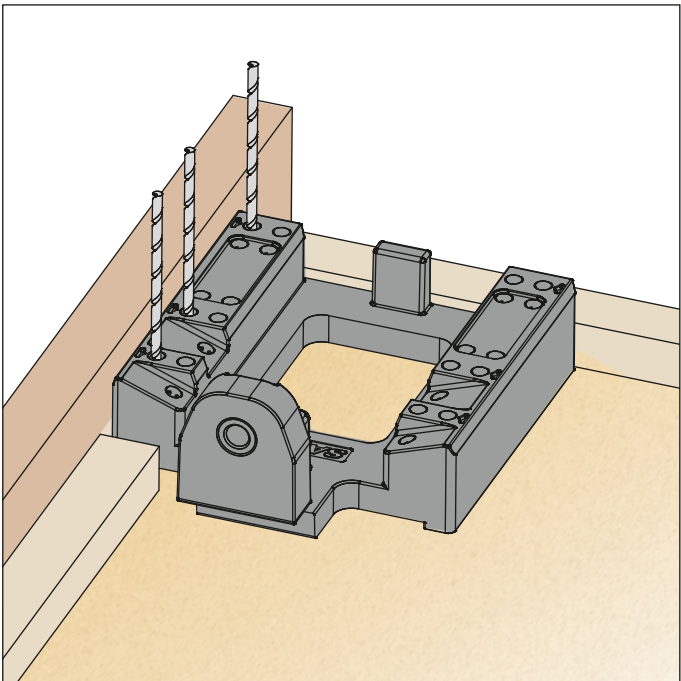# Drilling templates for drawers

Pre-drilling ø 2.5 mm, to assemble the clips to the front of the drawer


Use a ø 2.5 mm drill bit

Pre-drilling ø 2.5 mm, to assemble the clips to the drawer bottom

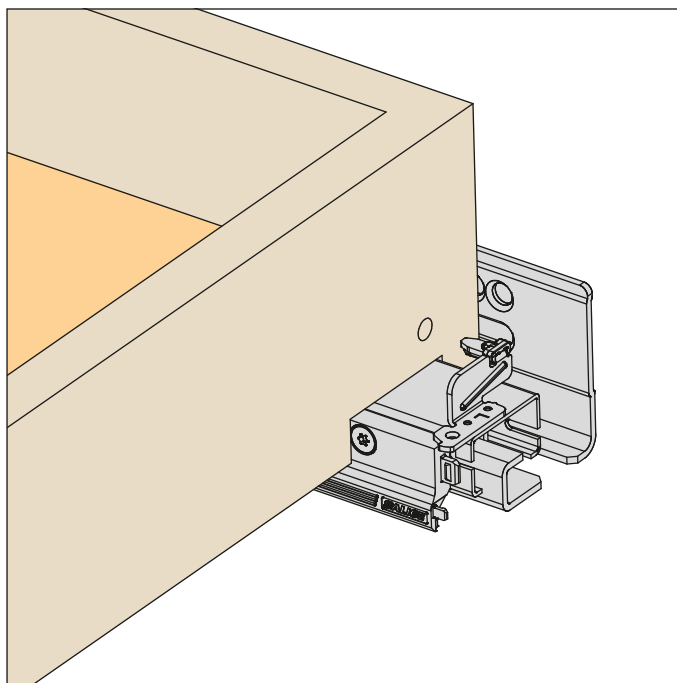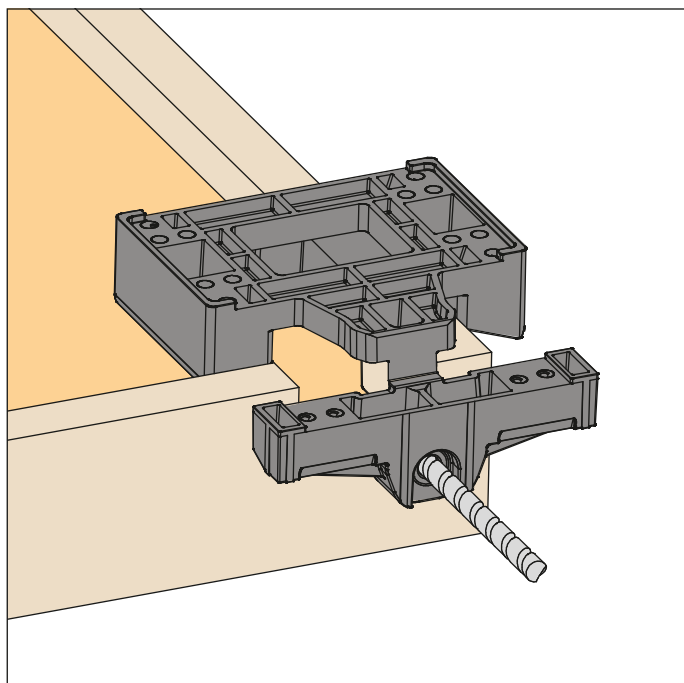
Use a ø 2.5 mm drill bit

Drilling templates for drawers - For all Progressa, Progressa⁺ and Progressa⁺ Shelf slides

Pre-drilling for the clips reduces the possibility of splitting the wood, thus assuring the correct and level installation of the clips.
The correct and level mounting assures a smooth assembly and operation of the drawer slide.
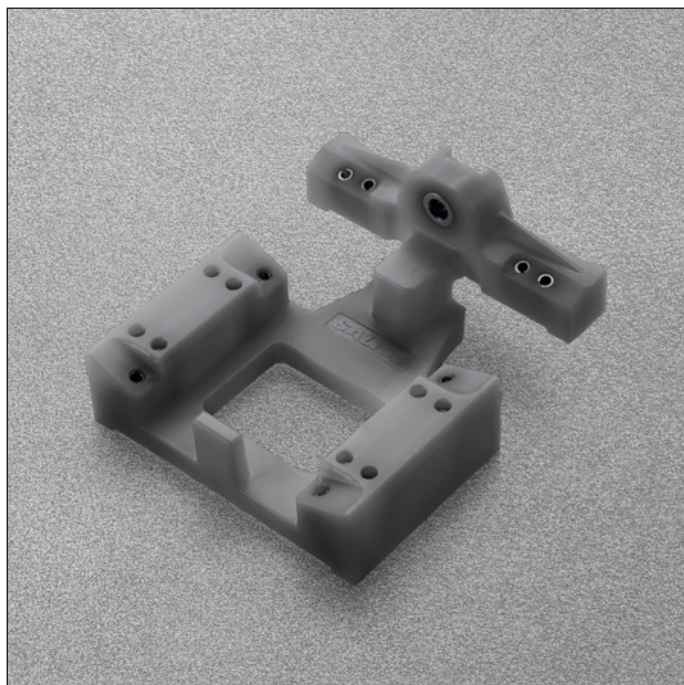
Front locking device
AFCEX56B
Right and left
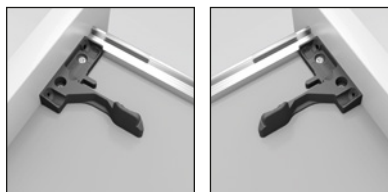
Drilling template
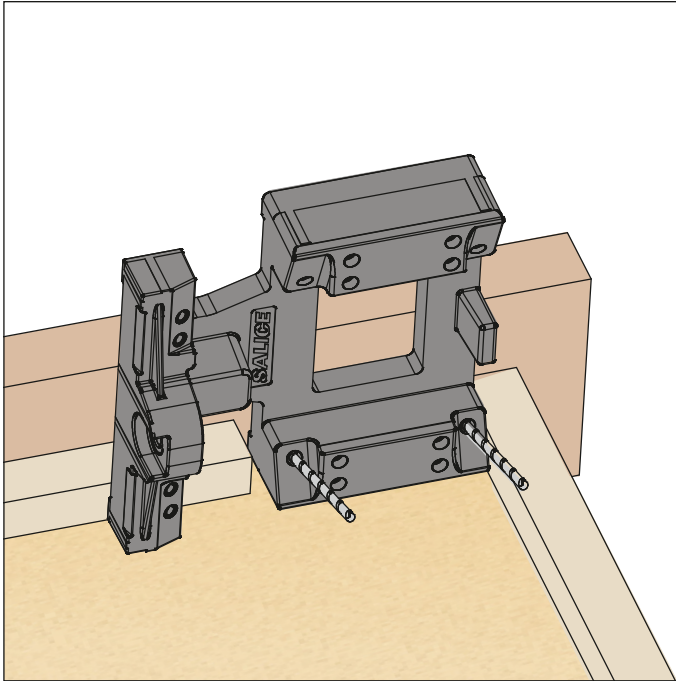**ASGD504U6XA**

PACKAGING
1 box = 1 pc.

Back drilling for hook

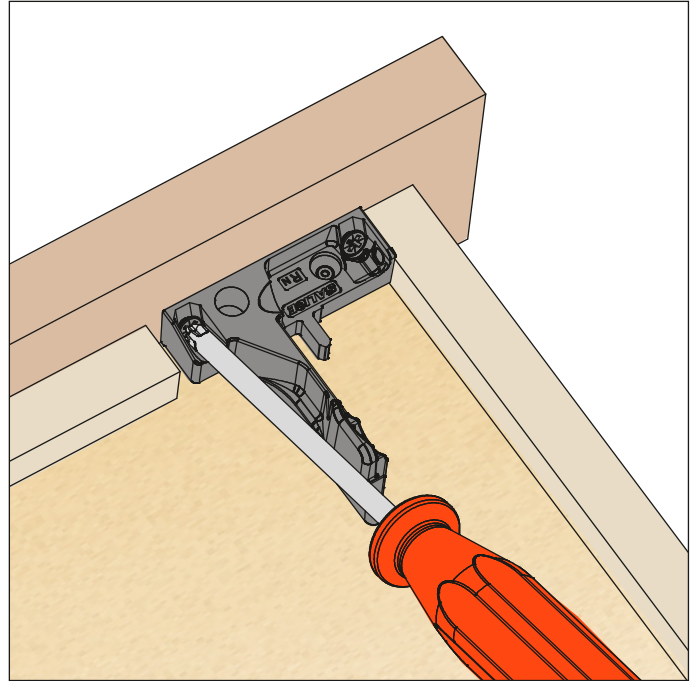Pre-bore for rear hook for proper alignment and depth (min. depth = 10 mm)

Use a ø 6 mm drill bit
Technical information, see page 10.

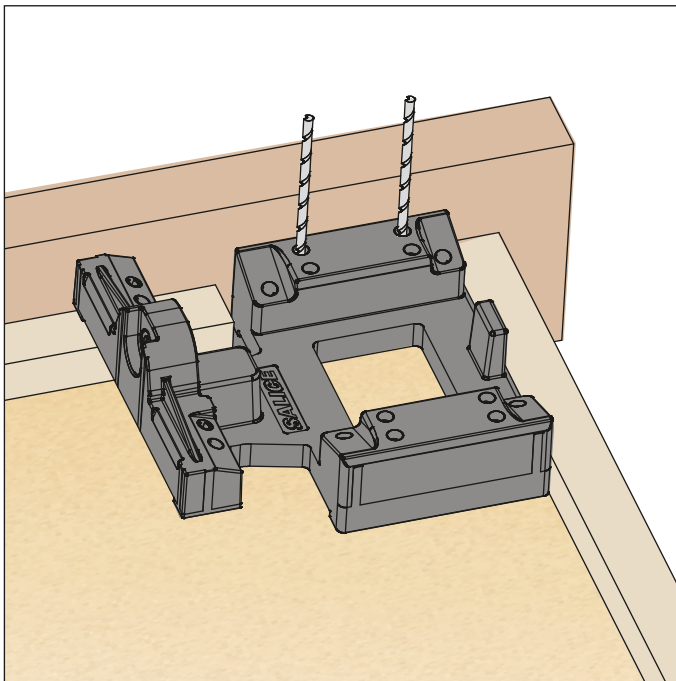# Drilling templates for drawers

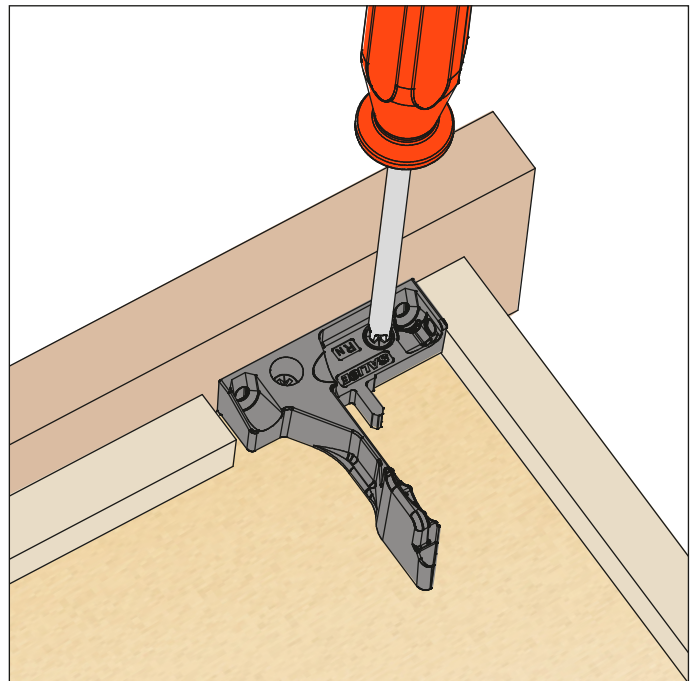## Fixing the clip on the drawer member

Use a ø 2.5 mm drill bit

The use of ø 6 x 16 mm screws is recommended for a correct operation of the clips

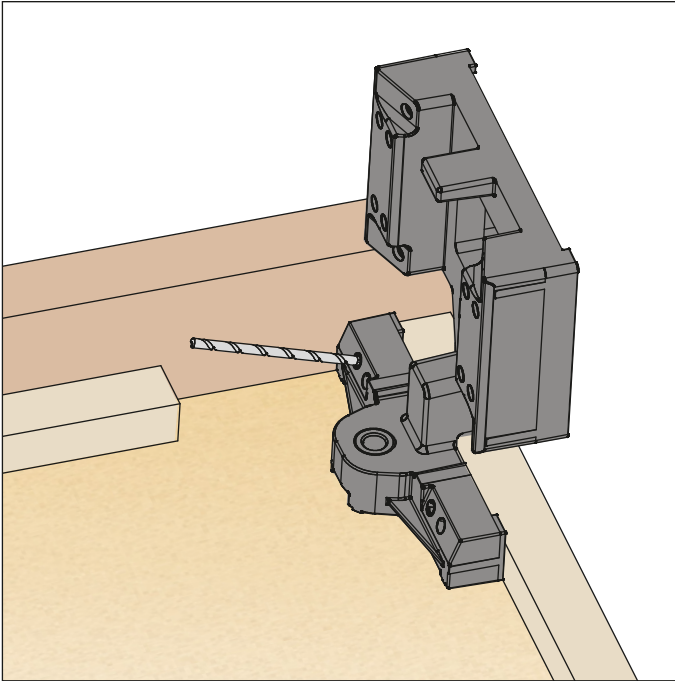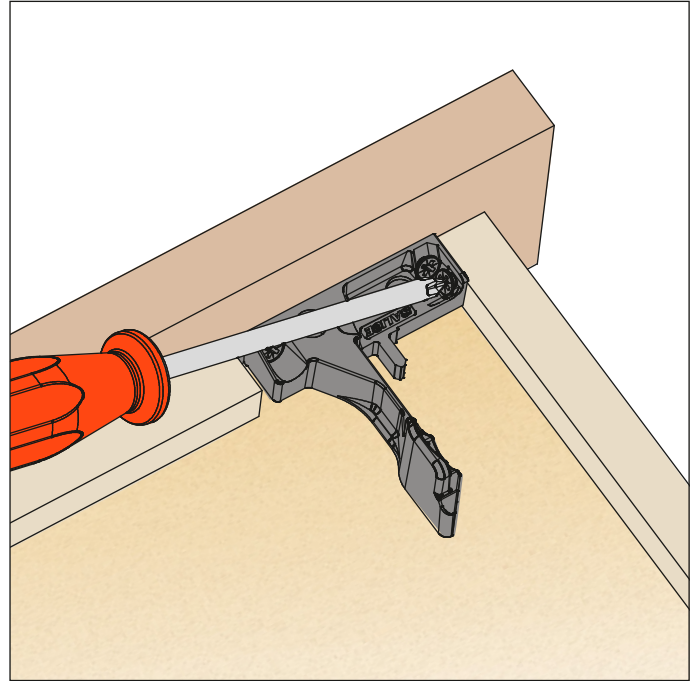## Vertical drilling for clips, fixing on the bottom
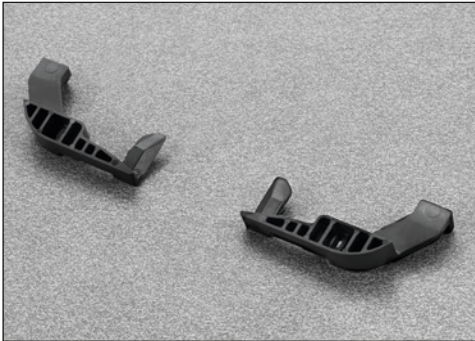

Use a ø 2.5 mm drill bit

Optional lateral fixing

Use a ø 2.5 mm (3/32") drill bit

The use of ø 6 x 16 mm screws is recommended for a correct operation of the clips

Accessories - For all Progressa and Progressa+ slides
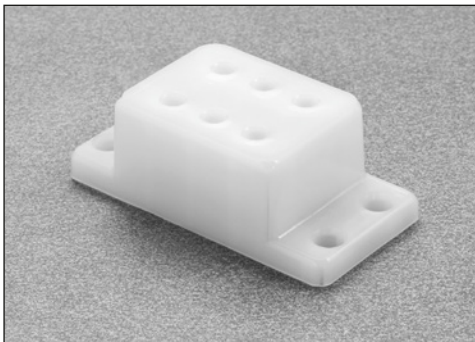
Tilt adjustment lever

AGLRXX3F

PACKAGING
1 box = 12 pcs right / 12 pcs left
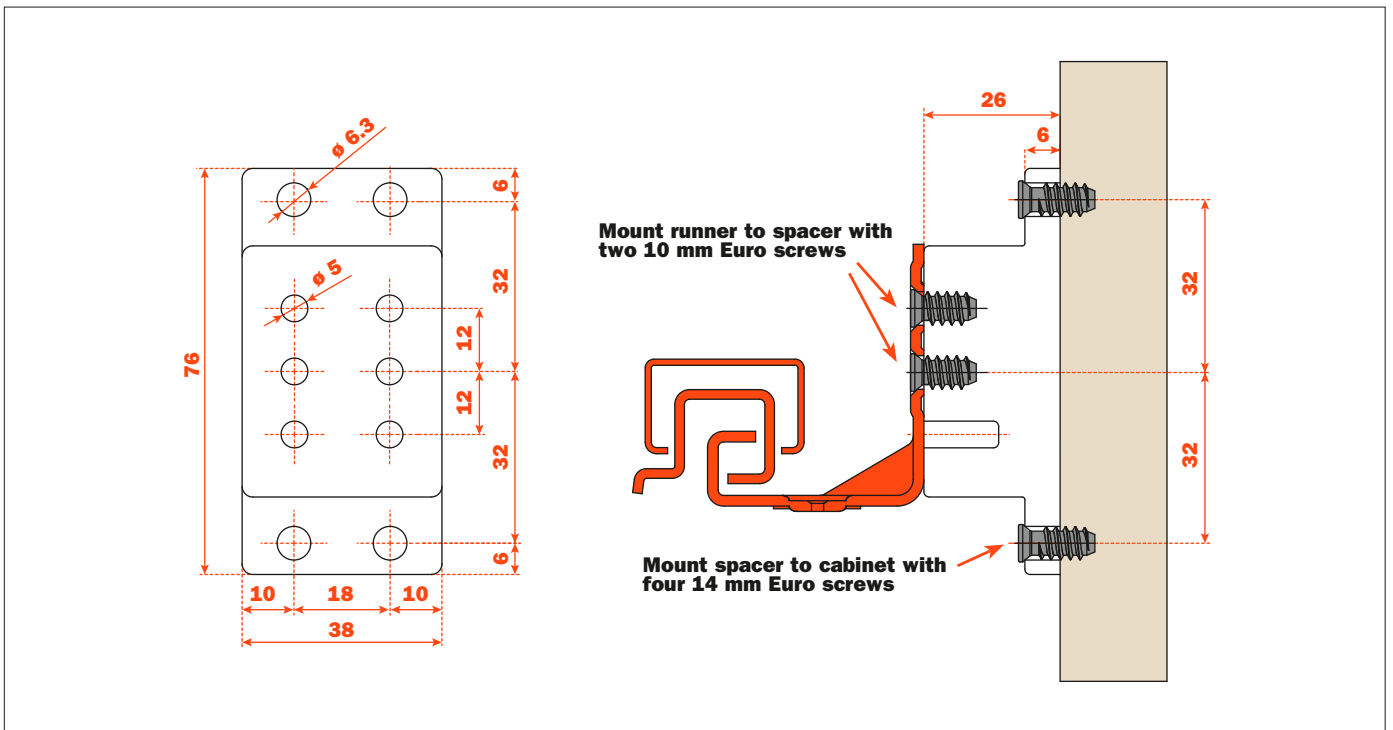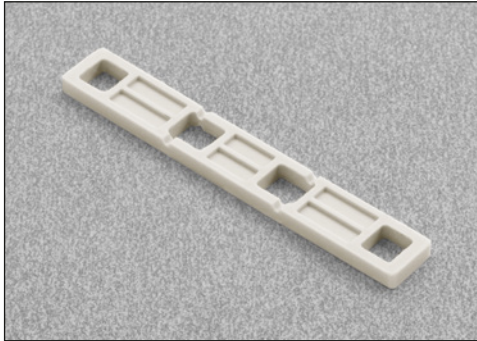
Technical information, see page 25.

Side spacer

ASPACERFUT

For spacing out Progressa runners for clearance on interior roll-outs.

PACKAGING
1 box = 100 pcs

Mount runner to spacer with two 10 mm Euro screws

Mount spacer to cabinet with four 14 mm Euro screws
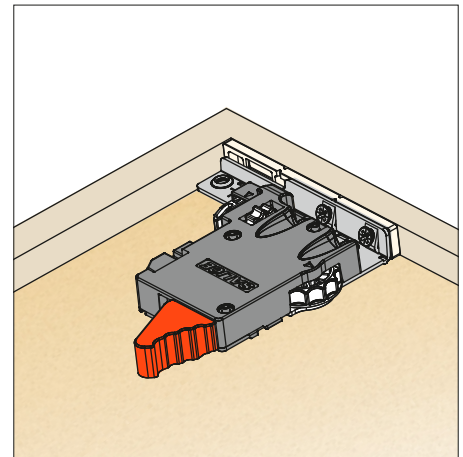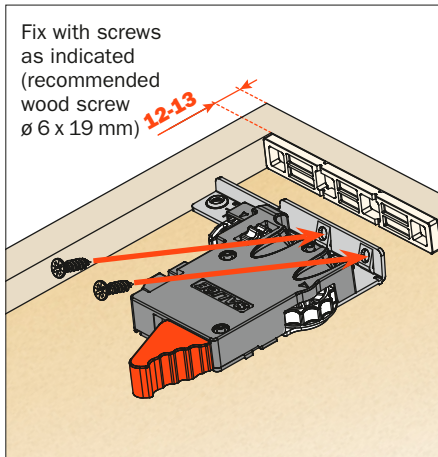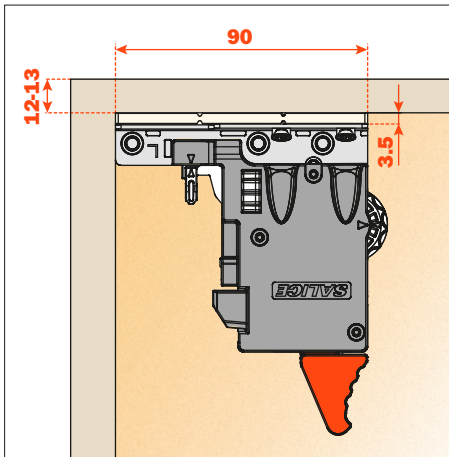
Spacer for 1/2" drawer sub-fronts

AFSFXXB

For drawer sides with sub-fronts between 12 and 13 mm (1/2"), we recommend the use of the build-up spacer
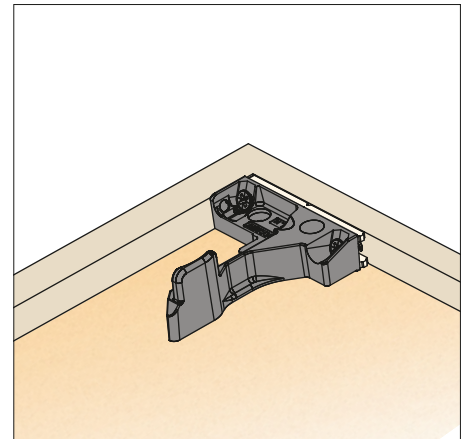
PACKAGING
1 box = 100 pcs

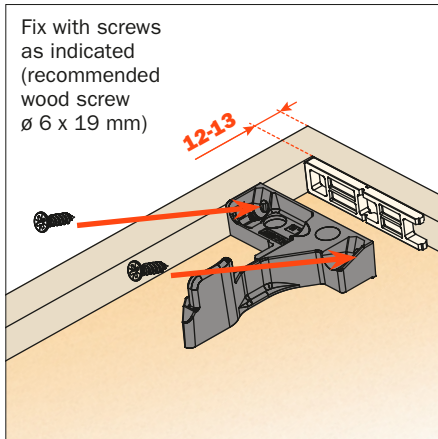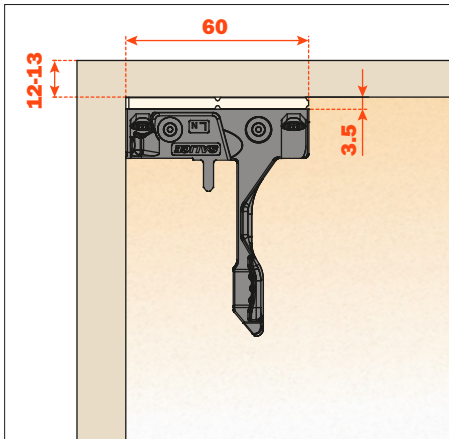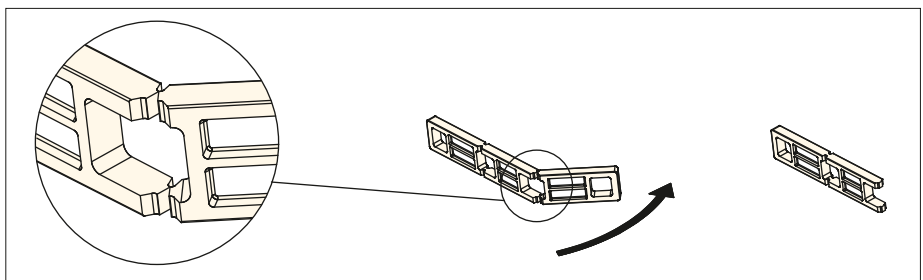To be used with **AFCGXX3B** front locking device (right and left)

90

12-13

3.5

Fix with screws as indicated (recommended wood screw ø 6 x 19 mm)

12-13

To be used with **AFCEX56B** front locking device (right and left)

60

12-13

3.5

Fix with screws as indicated (recommended wood screw ø 6 x 19 mm)

12-13

Spacer can be fit to any size by breaking tabs

Accessories - For all Progressa, Progressa+ and Progressa+ Shelf slides

Wood screw

V234X164

Wood screw # 6 x 16 mm (5/8")

PACKAGING
1 box = 100 pcs

Euro screw

V136X114

Euro screw # 6 x 11 mm (7/16")

PACKAGING
1 box = 100 pcs

V136X154

Euro screw # 6 x 14.5 mm (9/16")
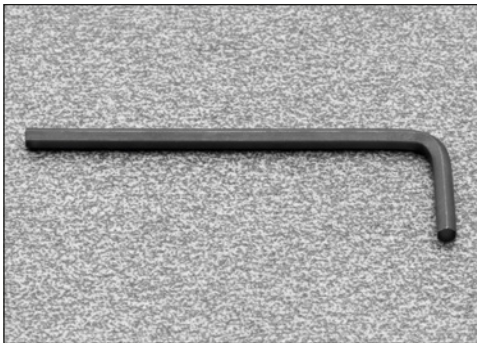
PACKAGING
1 box = 100 pcs

Pozi driver

D2A7XCXCP

PACKAGING
1 box = 100 pcs

Accessories - For all Progressa, Progressa+ and Progressa+ Shelf slides

ø 6 mm drill bit for rear hook

TDB7406R

PACKAGING 1 box = 1 pc.

Hex key to lock the stop collar set screw onto the 6 mm drill bit

TLKEY332

PACKAGING 1 box = 1 pc.

Drill bit stop collar for 6 mm bit

TSC06MM

PACKAGING
1 box = 1 pc.